
APPLICATION NOTE

AN0103

Setup via Modbus RTU for E+E Transmitters and Probes. Supported function codes & packet format

Rev. 1.3 05/2015

Relevant for:

This application note describes how to set the address and the baud rate for E+E devices with Modbus RTU interface.

Summary:

The application note provides support for setting individually the slave address and the communication. Additionally it describes the data encoding of floating point values and the Modbus function codes supported by the E+E devices.

Contents

Relevant for:	1
Summary:	1
1 Supported function codes.....	3
2 Packet format for read coil code 0x01	3
2.1 Example: Reading Status	3
3 Packet format for read function codes 0x03 and 0x04	3
3.1 Example: Reading Temperature.....	4
4 Packet format for write coil code 0x05	4
5 Packet format for write function code 0x06	4
5.1 Example: Setting a new Slave ID (Modbus address).....	4
5.2 Example: Changing the communication settings	5
6 Packet format for write multiple function code 0x10.....	6
7 Data encoding of float values	6
7.1 IEEE 754 format	6
7.2 Modbus floating point format	6
Contact information	7

1 Supported function codes

Following function codes are supported:

- 0x01 Read Coil Register
- 0x03 Read Holding Registers
- 0x04 Read Input Registers
- 0x05 Write Coil Register
- 0x06 Write Single Register
- 0x10 Write Multiple Registers

The measured values can be read by using 0x03 and 0x04 codes. The register numbers and the corresponding physical quantities are listed in the datasheet and in the operation manual of the specific E+E device.

2 Packet format for read coil code 0x01

Request:

Modbus Address	Function Code	Communication Address		Quantity of Coils		CRC	
		HB	LB	HB	LB	LB	HB
YY	01	YY	YY	YY	YY	CC	CC

Response from the E+E Modbus device:

Modbus Address	Function Code	Byte Count	N * Coil Status		CRC	
			HB	LB	LB	HB
YY	01	YY	YY	YY	CC	CC

2.1 Example: Reading Status

This example demonstrates reading the device status from a desired address. The supported addresses can be found in the datasheet and in the operation manual of the specific E+E device.

Request:

Modbus Address	Function Code	Communication Address		Quantity of Registers		CRC	
		HB	LB	HB	LB	LB	HB
YY	01	00	XX	00	08	CC	CC

Quantity of Coils = 8 ... 1 Byte (8Bit)

Response from the E+E Modbus device:

Modbus Address	Function Code	Byte Count	Coil Status	CRC	
				LB	HB
YY	01	01	YY	CC	CC

3 Packet format for read function codes 0x03 and 0x04

Request:

Modbus Address	Function Code	Communication Address		Quantity of Registers		CRC	
		HB	LB	HB	LB	LB	HB
YY	03, 04	YY	YY	YY	YY	CC	CC

Response from the E+E Modbus device:

Modbus Address	Function Code	Byte Count	N * Registers		CRC	
			HB	LB	LB	HB
YY	03, 04	YY	YY	YY	CC	CC

3.1 Example: Reading Temperature

This example demonstrates reading the temperature (float value) from address 0x19. A float value consists of 4 Bytes.

Request:

Modbus Address	Function Code	Communication Address		Quantity of Registers		CRC	
		HB	LB	HB	LB	LB	HB
YY	03	00	19	00	02	CC	CC

Response from the E+E Modbus device:

Modbus Address	Function Code	Byte Count	2 Registers (4 Byte)				CRC	
			HB	LB	HB	LB	LB	HB
YY	03	04	YY	YY	YY	YY	CC	CC

4 Packet format for write coil code 0x05

Request:

Modbus Address	Function Code	Communication Address		Register Value		CRC	
		HB	LB	HB	LB	LB	HB
YY	05	YY	YY	YY	YY	CC	CC

Response from the E+E Modbus device:

Modbus Address	Function Code	Communication Address		Register Value		CRC	
		HB	LB	HB	LB	LB	HB
YY	05	YY	YY	YY	YY	CC	CC

The supported addresses can be found in the datasheet and in the operation manual of the specific E+E device.

5 Packet format for write function code 0x06

Request:

Modbus Address	Function Code	Communication Address		Register Value		CRC	
		HB	LB	HB	LB	LB	HB
YY	06	YY	YY	YY	YY	CC	CC

Response from the E+E Modbus device:

Modbus Address	Function Code	Communication Address		Register Value		CRC	
		HB	LB	HB	LB	LB	HB
YY	06	YY	YY	YY	YY	CC	CC

5.1 Example: Setting a new Slave ID (Modbus address)

The new Slave ID (Modbus address) can be set in the range of 1 to 247 by using the 0x06 function code and address 0x00.

Request:

Modbus Address	Function Code	Communication Address		Register Value		CRC	
		HB	LB	HB	LB	LB	HB
XX	06	00	00	00	YY	CC	CC

XX...current Modbus address

YY...new Modbus address (1-247)

Response from the E+E Modbus device:

Modbus Address	Function Code	Communication Address		Register Value		CRC	
		HB	LB	HB	LB	LB	HB
XX	06	00	00	00	YY	CC	CC


Please note: The register of slave ID and of baud rate cannot be read by any function code!

5.2 Example: Changing the communication settings

The baud rate, parity and stop bit can be changed using the 0x06 function code and address 0x01.

Request:

Modbus Address	Function Code	Communication Address		Register Value		CRC	
		HB	LB	HB	LB	LB	HB
YY	06	00	01	01	YY	CC	CC

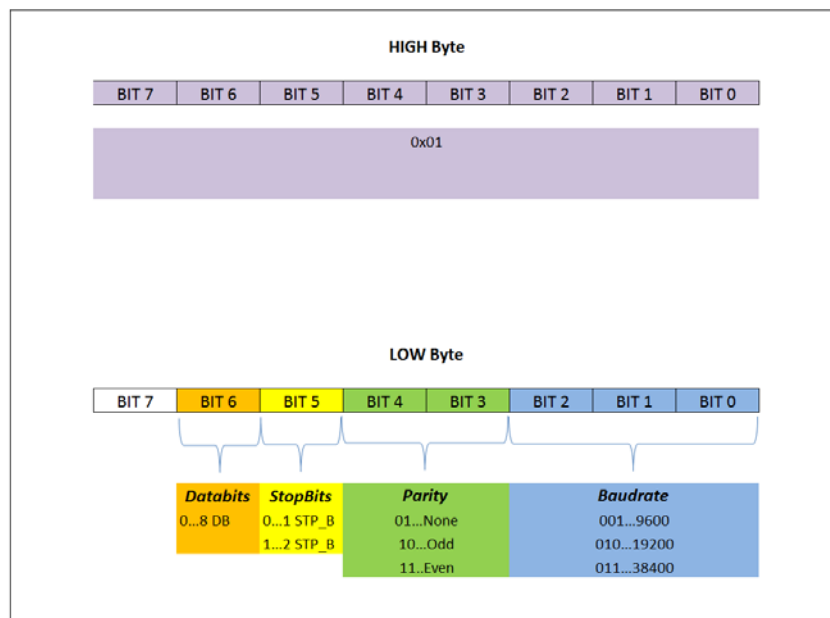

Response from the E+E Modbus device:

Modbus Address	Function Code	Communication Address		Register Value		CRC	
		HB	LB	HB	LB	LB	HB
YY	06	00	01	01	YY	CC	CC

Note: The register of baud rate cannot be read!

6 Packet format for write multiple function code 0x10

Request:

Modbus Address	Function Code	Communication Address		Quantity of Registers		Byte Count	N * Register Values		CRC	
		HB	LB	HB	LB		HB	LB	LB	HB
YY	10	YY	YY	YY	YY	YY	YY	YY	CC	CC

Response from the E+E Modbus device:

Modbus Address	Function Code	Communication Address		Quantity of Registers		CRC	
		HB	LB	HB	LB	LB	HB
YY	10	YY	YY	YY	YY	CC	CC

The supported addresses can be found in the datasheet and in the operation manual of the specific E+E device.

7 Data encoding of float values

The Modbus standard allows for flexible word order, values larger than 16 bits, such as floating point values (32 Bit).

7.1 IEEE 754 format

The IEEE standard definition of floating point values:

SEEEEEEE	EMMMMMMM	MMMMMMMM	MMMMMMMM
Byte 1	Byte 2	Byte 3	Byte 4

S ... Sign
 E ... Exponent
 M ... 23 Bit Mantissa

7.2 Modbus floating point format

E+E devices use the Modbus floating point format. The byte pairs 1, 2 and 3, 4 are inverted as follows.

MMMMMMMM	MMMMMMMM	SEEEEEEE	EMMMMMMM
Byte 3	Byte 4	Byte 1	Byte 2

Contact information

E+E Elektronik Ges.m.b.H.

Langwiesen 7
A-4209 Engerwitzdorf
Austria

Tel.: +43 7235 605 0

Fax.: +43 7235 605 8

E-Mail: info@epluse.com

Homepage: www.epluse.com

For more information got to the download centre on the E+E homepage:

<http://www.epluse.com/de/service-support/download-center/>

The information in this document is believed to be accurate in all respects at the time of publication but is subject to change without notice. E+E Elektronik assumes no responsibility for errors and omissions, and shall not accept responsibility for any consequences resulting from the use of information included herein. Additionally, E+E Elektronik assumes no responsibility for the functioning of features or parameters not described. E+E Elektronik reserves the right to make changes without further notice. E+E Elektronik makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does E+E Elektronik assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including consequential or incidental damages without limitation. E+E Elektronik products are not designed, intended, or authorised for use in applications intended to support or sustain life, or for any other application in which the failure of the E+E Elektronik product could create a situation where personal injury or death may occur. Should the buyer purchase or use E+E Elektronik products for any such unintended or unauthorised application, the buyer shall indemnify and hold E+E Elektronik harmless against all claims and damages.